




Disassembling Canon PowerShot SD800 IS LCD Display

Separate the LCD Display and back light.

Written By: Jeremy Rabaino

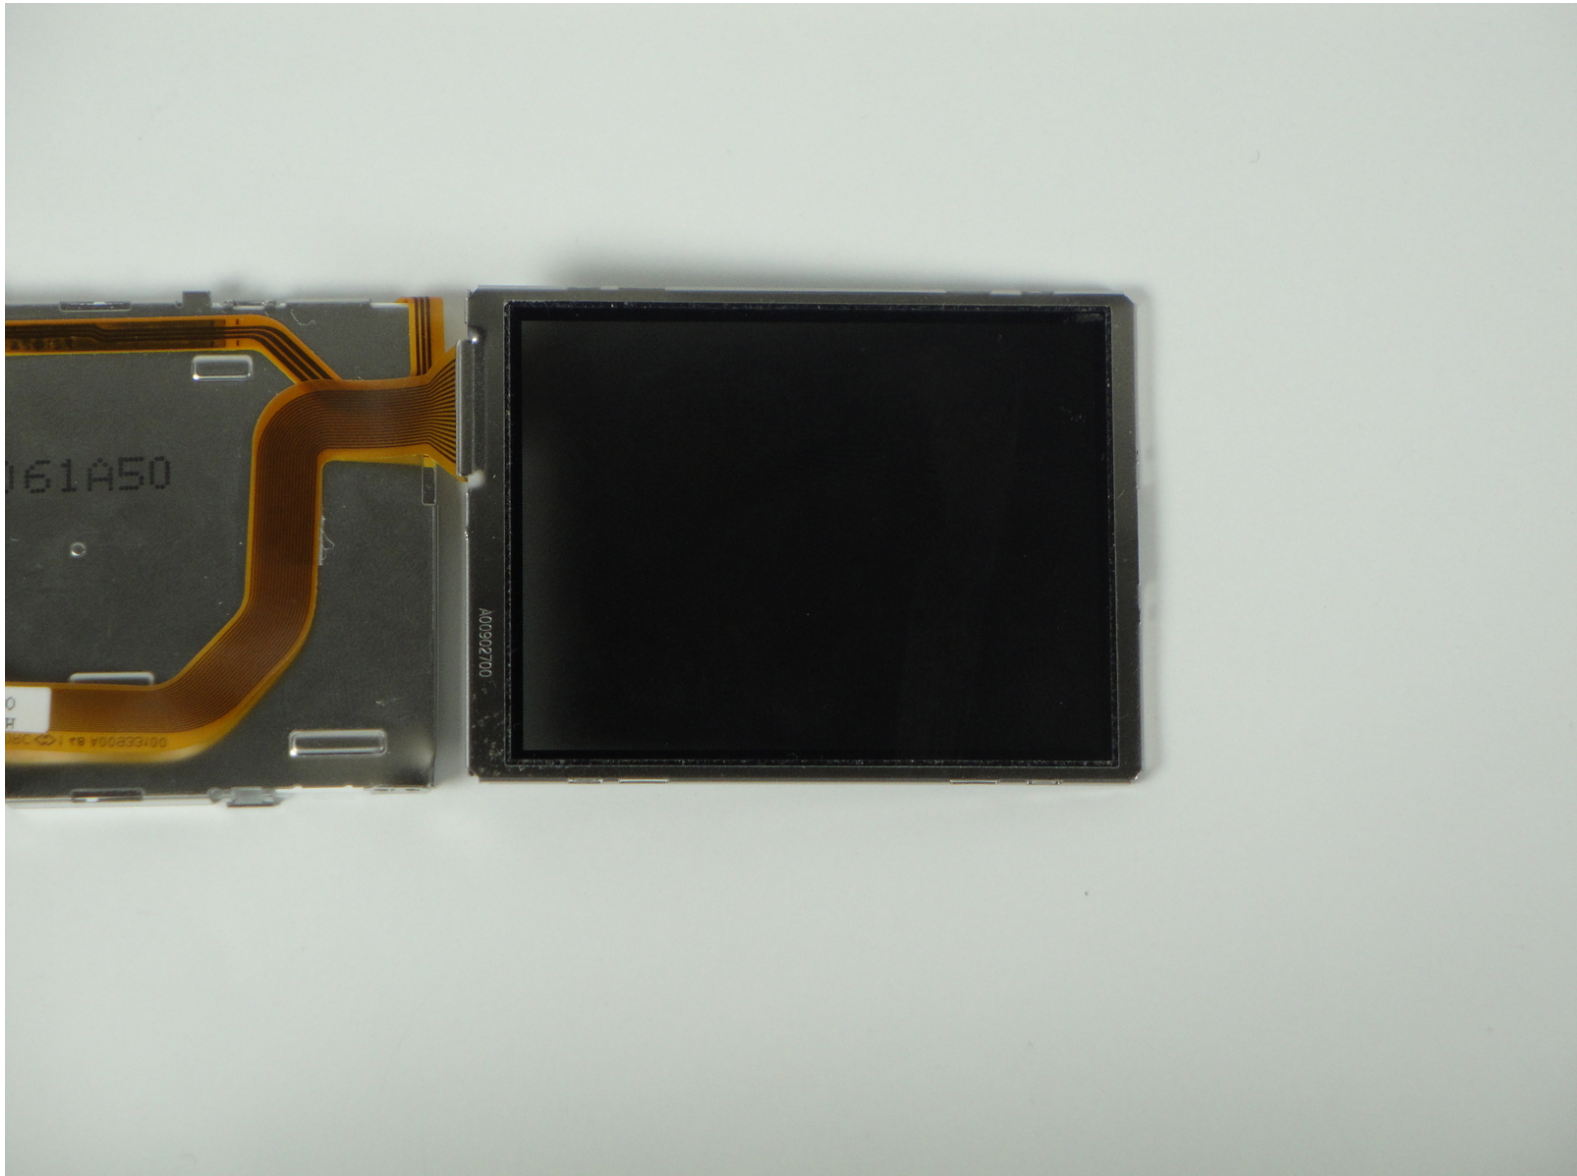

INTRODUCTION

Remove the back cover before removing LCD display.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Cover



- Remove one 2.25mm screw on the bottom.

Step 2



- Remove two 2.25mm screws on the right side looking from the front.

Step 3




- Remove one 4.7mm screw on the side with the AV output.

Step 4




- Pull off the back cover.
- ⓘ The back cover tends to stick in the top corner (near the mode dial) due to a metal clip. Jiggle the cover side to side as you pull it out.

Step 5 — LCD Assembly

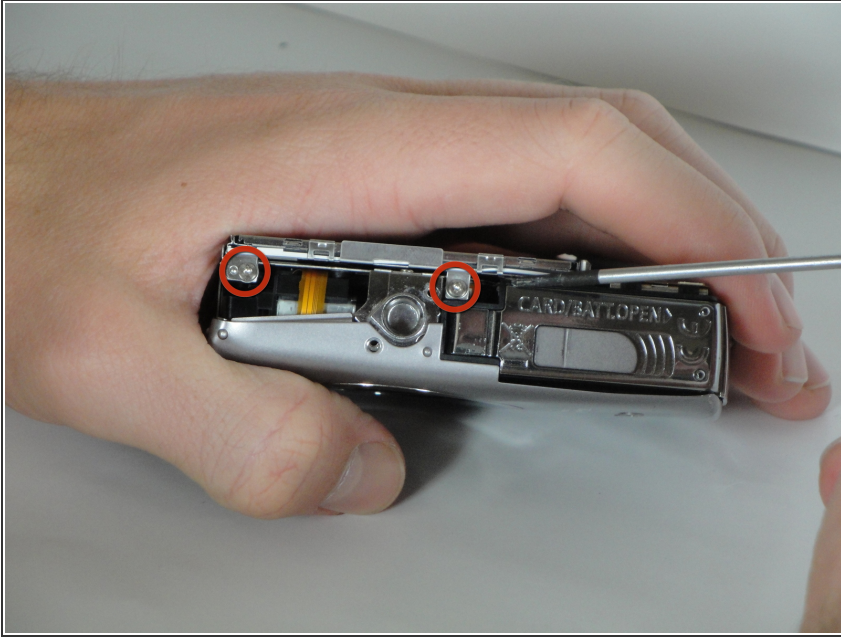

- Remove 2 2.4mm screws on bottom.


Step 6

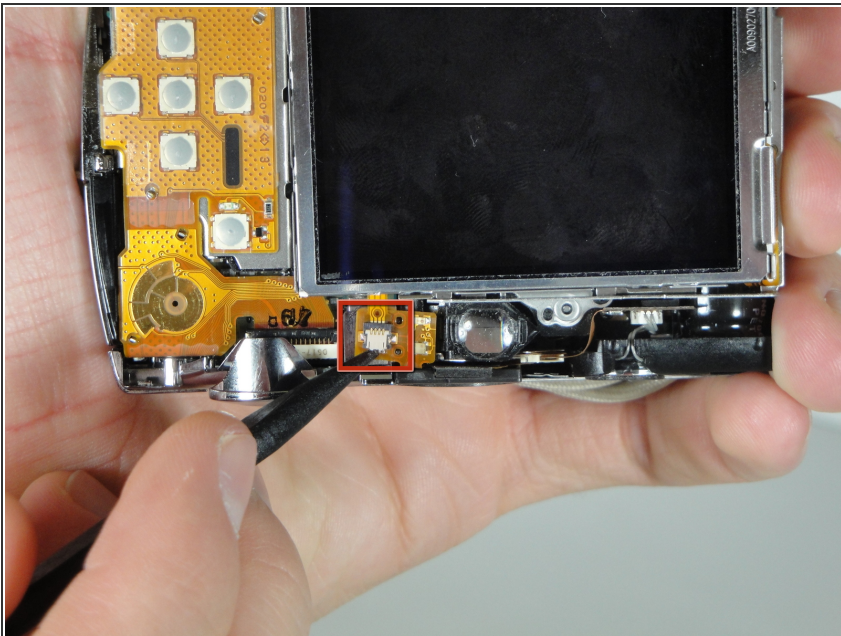

- Follow the small data cable to where it connects to the camera.
- Lift the back white portion to unlock the cable.
- The cable should easily slide out.

⚠ The connector is very fragile. Use caution when lifting the lock.


Step 7

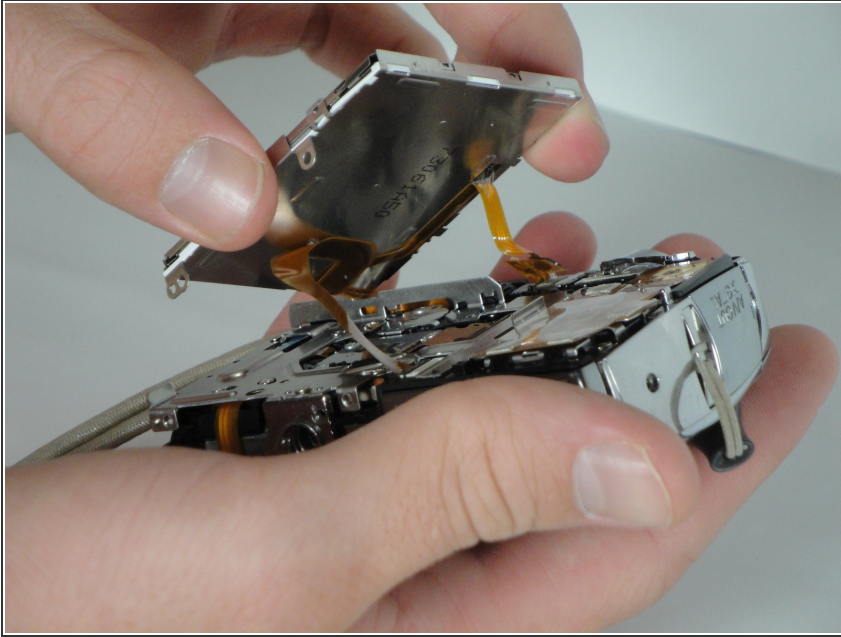

- Gently lift LCD display off.

- ⚠ There will be two data cables still attached to the camera. Do not break them.
- ⓘ There may be a loose strip of metal along the inner side of the LCD display for a secure fit.


Step 8

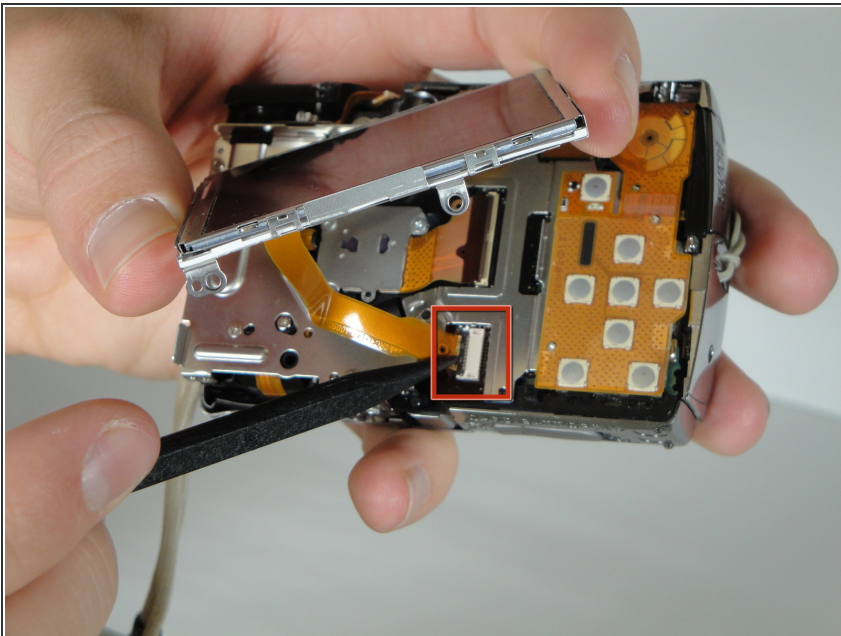

- Follow the larger cable to where it connects to the camera.
- Lift the front black portion of the connector to unlock the data cable.
- The cable should easily slide out.


- ⚠ The connector is very fragile. Use caution when lifting the lock.

Step 9 — LCD Display

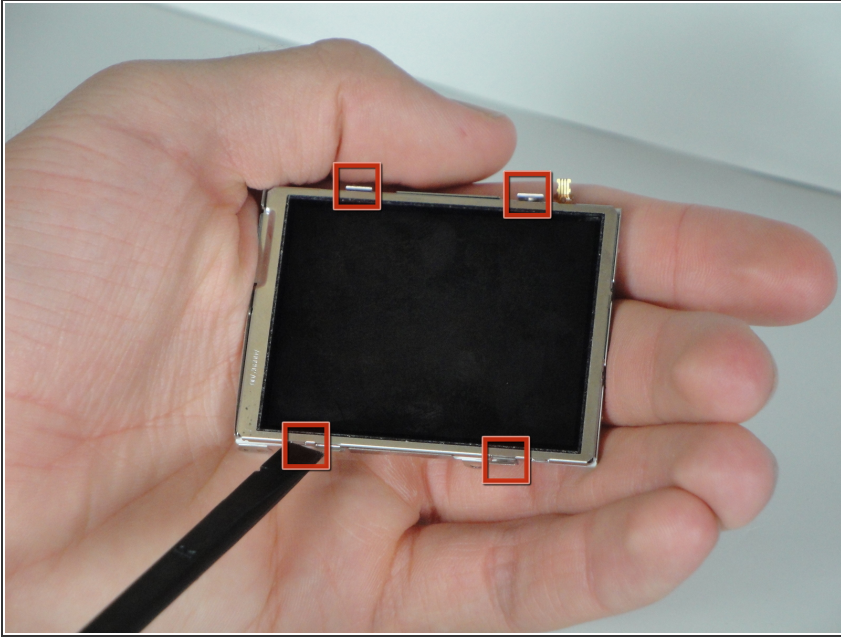

- Pry the LCD display out from the four metal clamps.

Step 10

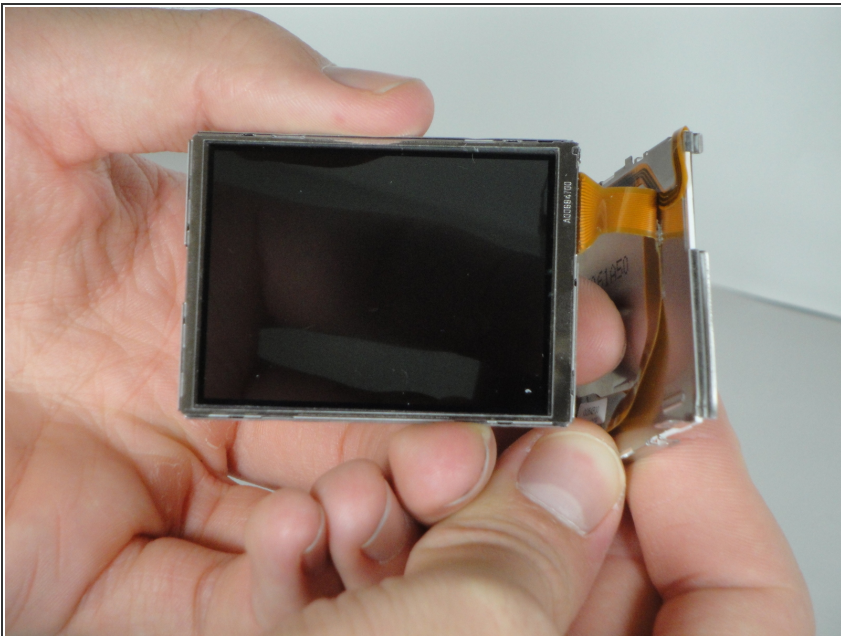

- To remove the LCD, peel the larger data cable off from the frame.
- ⓘ The LCD is glued by its data cable to the back of the LCD frame.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 08:10:56 AM.